

How to use your heaters

Hallway Heater:

As per the sign on the wall, this switch for this heater should always be left "ON". This will maintain the general heat of the apartment. This will store heat at night when the electricity supply is cheaper and continue to heat the apartment during the day.

Living Room Heater:

This heater has two switches:

1. There will be a sign on the wall above one switch advising you to always keep this switched "ON", please do not turn this off. This will mean the heater will store heat up at night and warm the apartment during the day.
2. Heating Boost switch should be left OFF unless the room is cold and you need extra heating. Please switch this off as soon as the room has heated up again. Please ensure you always switch this off when you leave the room.

Bedroom Heater:

Heating Boost switch should be left "OFF" unless the room is cold and you need extra heating. Please switch this off as soon as the room has heated up again. Please ensure you always switch this off when you leave the room. Please do not touch any internal settings on the heater itself as they are set at their ideal heat settings.

We have included extra signage on your heaters to help you understand these better but if you have any questions regarding this please contact the Accommodation Office as soon as possible and we will gladly explain the system in person.